

Spare parts list

RP504

Reversible Plate

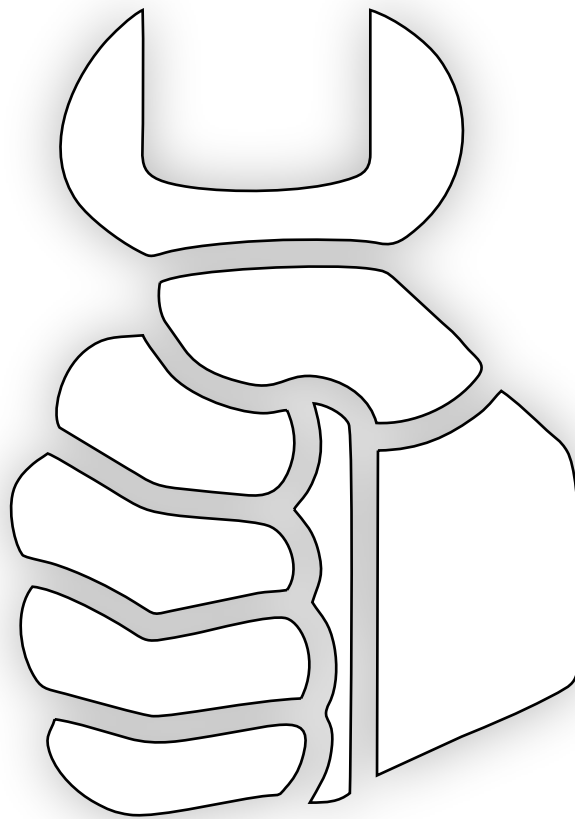

patronTM

Preventative Maintenance Kits

Start Up Kit 1
12 Months / 500 Hours Service Kit 3
Six months / Every 250 hours kit 5


Service, repair and wear part kits

Block paving plate kit 700 mm (27.6 in.) 7
Shock absorber repair kit 9
Eccentric element repair kit 11
Forward and reverse piston repair kit 13
Extension plate kit 2 x 75 mm (2 x 2.95 in.) 15
Extension plate kit 2 x 150 mm (2 x 5.90 in.) 17
Slanted extension plate kit 2 x 150 mm (2 x 5.90 in.) FJ
Hour meter kit 2F
Compaction Indicator Kit 2H

Spare parts list


Frame and hoods 25
Ground plate installation 27
Engine installation 29
Eccentric element 33
Engine 37
Fuel tank Hatz 1D81 41
Centrifugal clutch 43
Hydraulic system 45
Electric equipment 49
Handle 51
Throttle control, EPA version 53
Non EPA throttle control 55
Labels 57

Preventative Maintenance Kits Start Up Kit

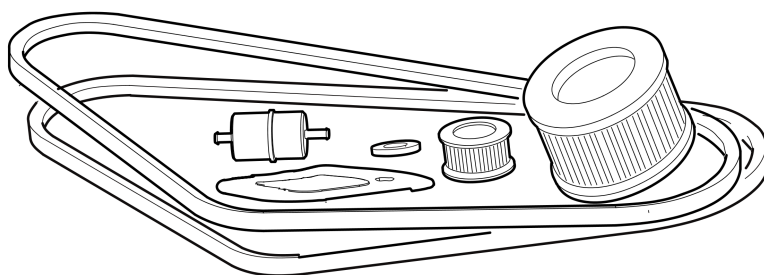


Item	Part No.	Name	Qty	L
1	3382100659	Start Up Kit	1	
2	3382100611	500 Hours Service Kit / 12 Months Service Kit	1	
3	3382015748	Oil filter	1	
4	3382015753	Product label	1	
5	3382015749	Air Filter	1	
6	4700381566	Air filter	1	
7	3382014951	V-belt	2	
8	3382100573	Every 250 hours / six months	1	
9	3382015748	Oil filter	1	
10	3382015753	Product label	1	
11	3382015749	Air Filter	1	
12	9234001203	Cobra & compactor Impact-OIL 1L	2	

Preventative Maintenance Kits 12 Months / 500 Hours Service Kit

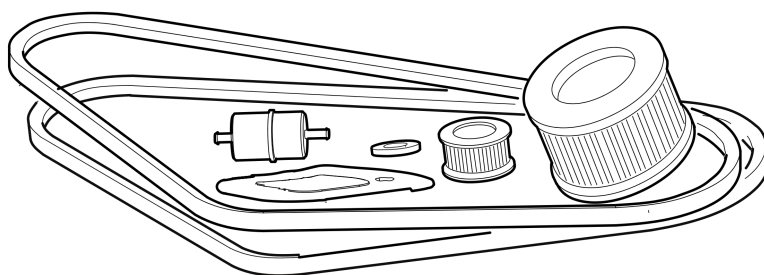


Item	Part No.	Name	Qty	L
1	3382100611	500 Hours Service Kit / 12 Months Service Kit	1	
2	3382015748	Oil filter	1	
3	3382015753	Product label	1	
4	3382015749	Air Filter	1	
5	4700381566	Air filter	1	
6	4700386312	V-belt	2	

Preventative Maintenance Kits Six months / Every 250 hours kit

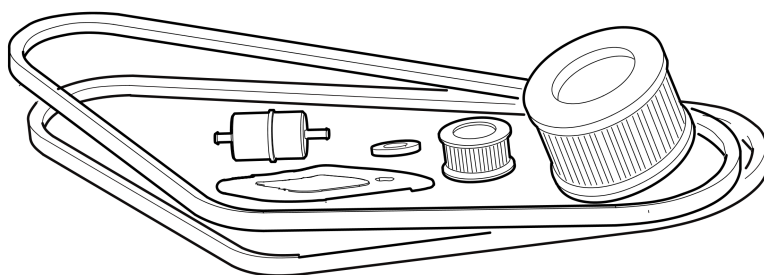


Item	Part No.	Name	Qty	L
1	3382100573	Every 250 hours / six months	1	
2	3382015748	Oil filter	1	
3	3382015753	Product label	1	
4	3382015749	Air Filter	1	

Service, repair and wear part kits Block paving plate kit 700 mm (27.6 in.)

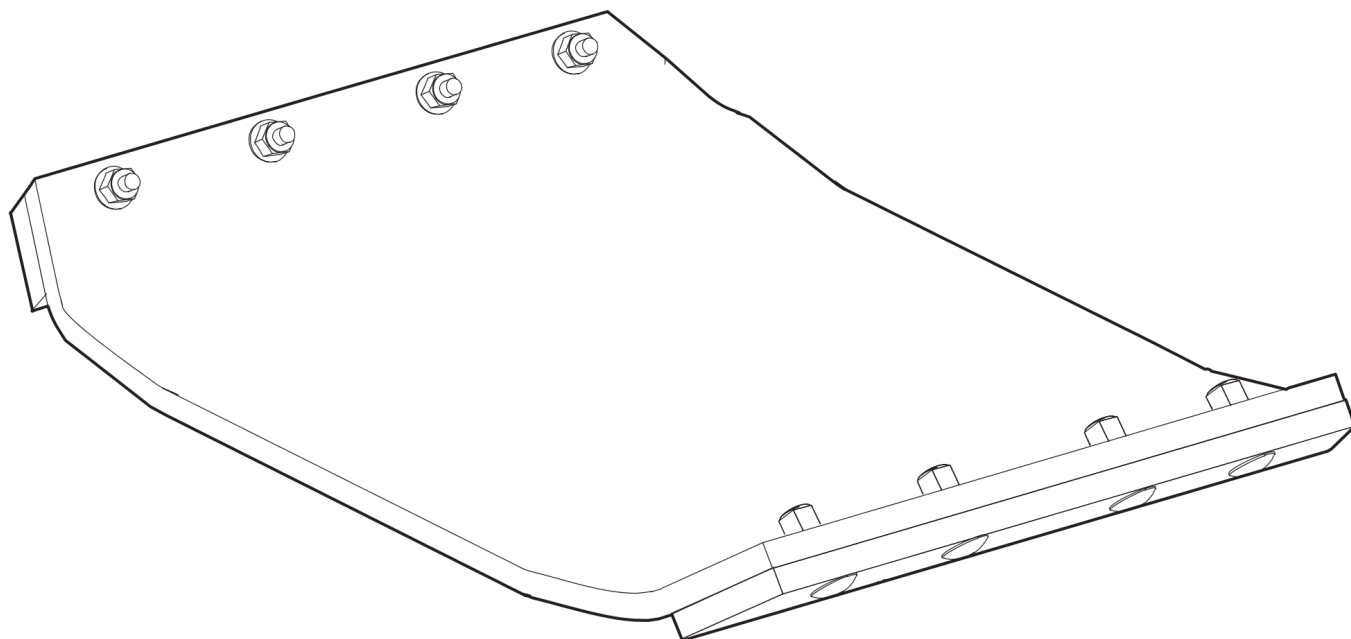

Item	Part No.	Name	Qty	L
1	3382015076	Block paving plate kit	1	
2	3382015074	Polyurethane plate, 700 mm, 27.6 in.	1	
3	4700381902	Bracket	2	
4	0147300050	Flange screw	8	

Service, repair and wear part kits Shock absorber repair kit

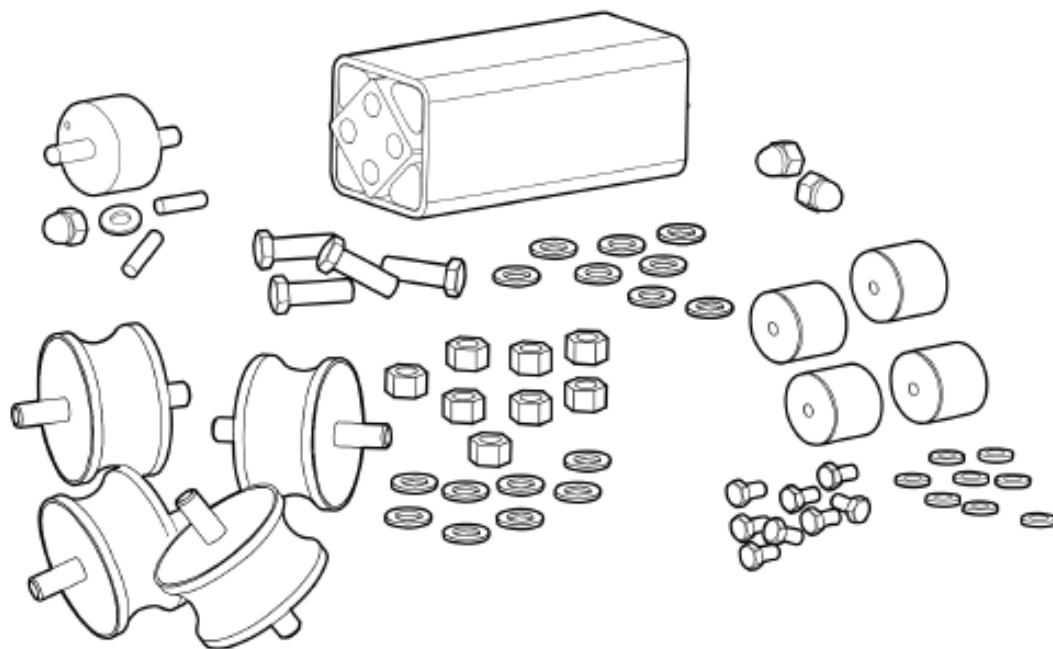


Item	Part No.	Name	Qty	L
-	3382100581	Shock absorber repair kit	1	
1	0266211400	Hexagon nut	8	
2	0301237800	Plain washer	8	
3	3382010490	Shock absorber	4	
4	0147135903	Hexagon bolt	8	
5	0300027438	Washer	8	
6	3382010492	Shock absorber	1	
7	0147140303	Hex. head screw	4	
8	4700904703	Plain washer 13x24x4 mm	8	
9	0291112822	Lock nut	4	
10	4700281431	Shock absorber	1	
11	0108123600	Spirol pin	2	
12	4700581012	Nut	1	
13	0300013022	Washer	2	
14	0266211100	Nut hexagon	1	

Service, repair and wear part kits Eccentric element repair kit




Item	Part No.	Name	Qty	L
-	3382100874	Eccentric element repair kit	1	
1	3382014176	Radial lip-type seal	1	
2	3382014138	Bearing	4	
3	4700928796	Ball bearing	2	
4	0335213500	Retaining ring	1	
5	0300027464	Washer	8	
6	0333520018	Lock washer	16	
7	0211125000	Hex socket screw	16	
8	0215001073	Hex. sock. screw various head	8	
9	3382015645	O-ring	1	

Service, repair and wear part kits Forward and reverse piston repair kit

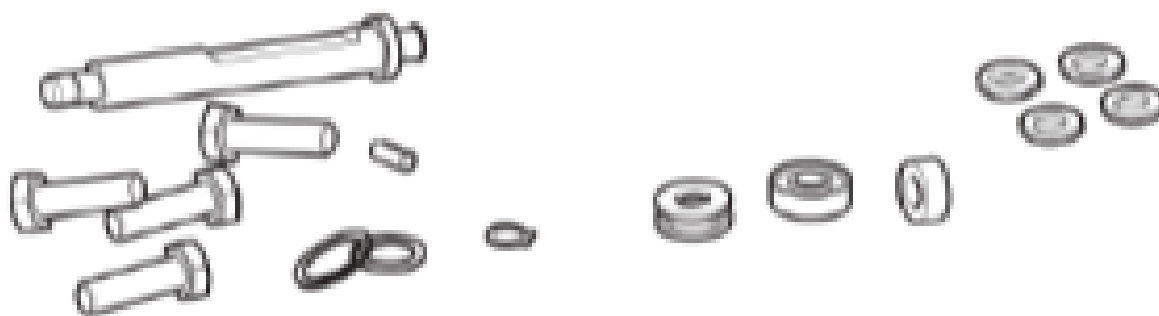


Item	Part No.	Name	Qty	L
-	3382100875	Forward and reverse piston repair kit	1	
1	3382014188	Sealing	1	
2	0335111400	Circlip	1	
3	3382014140	Ball bearing	2	
4	4700151043	Retaning ring for hole 28	1	
5	0108132400	Spring pin, Ø6 x 20 mm DIN 1481	1	
6	0333520018	Lock washer	4	
7	0211125000	Hex socket screw	4	

Service, repair and wear part kits Extension plate kit 2 x 75 mm (2 x 2.95 in.)

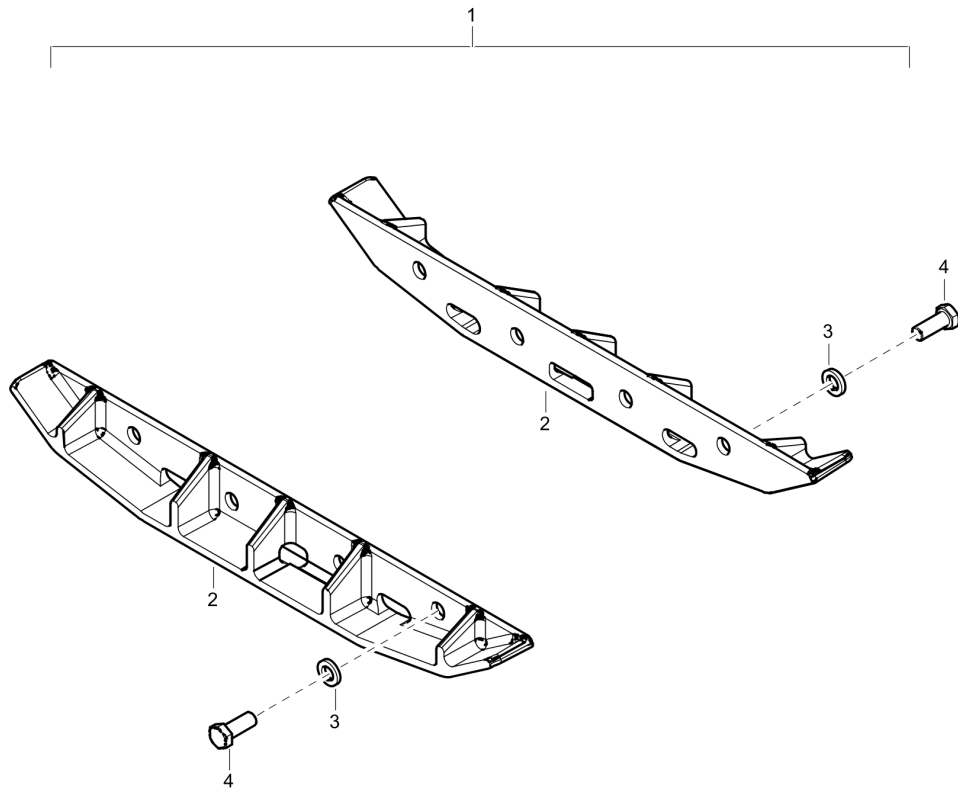


Item	Part No.	Name	Qty	L
1	3382014950	Extension plate kit 2 x 75 mm (2 x 2.95 in.)	1	
2	-	Extension plate, 75 mm, 2.95 in.	2	
3	-	Washer, 21 x 36 x 6 mm, 0.83 x 1.42 x 0.24 300 HV	8	
4	-	Screw, M20 x 50 mm 8.8 A9K	8	

Service, repair and wear part kits Extension plate kit 2 x 150 mm (2 x 5.90 in.)

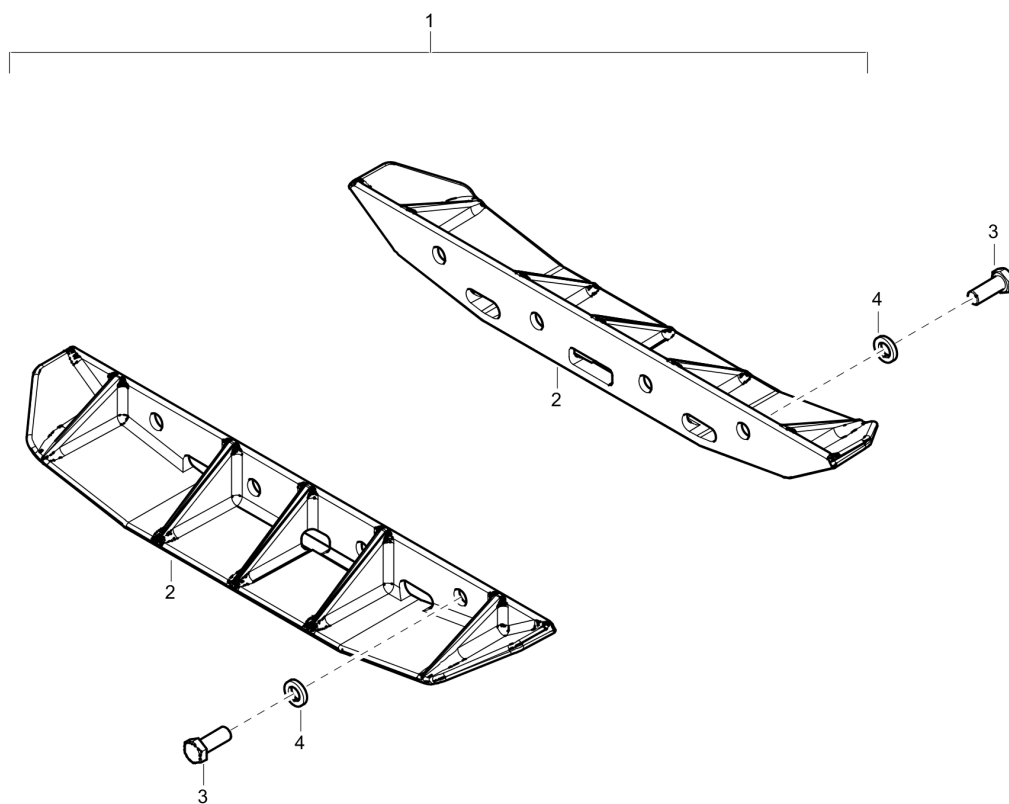

Item	Part No.	Name	Qty	L
1	3382014952	Extension plate kit 2 x 150 mm (2 x 5.90 in.)	1	
2	-	Extension plate, 150 mm, 5.90 in.	2	
3	-	Screw, M20 x 50 mm 8.8 A9K	8	
4	-	Washer, 21 x 45 mm, 0.83 x 0.87 x 1.77 in. 300 HV	8	

Service, repair and wear part kits Slanted extension plate kit 2 x 150 mm (2 x 5.90 in.)

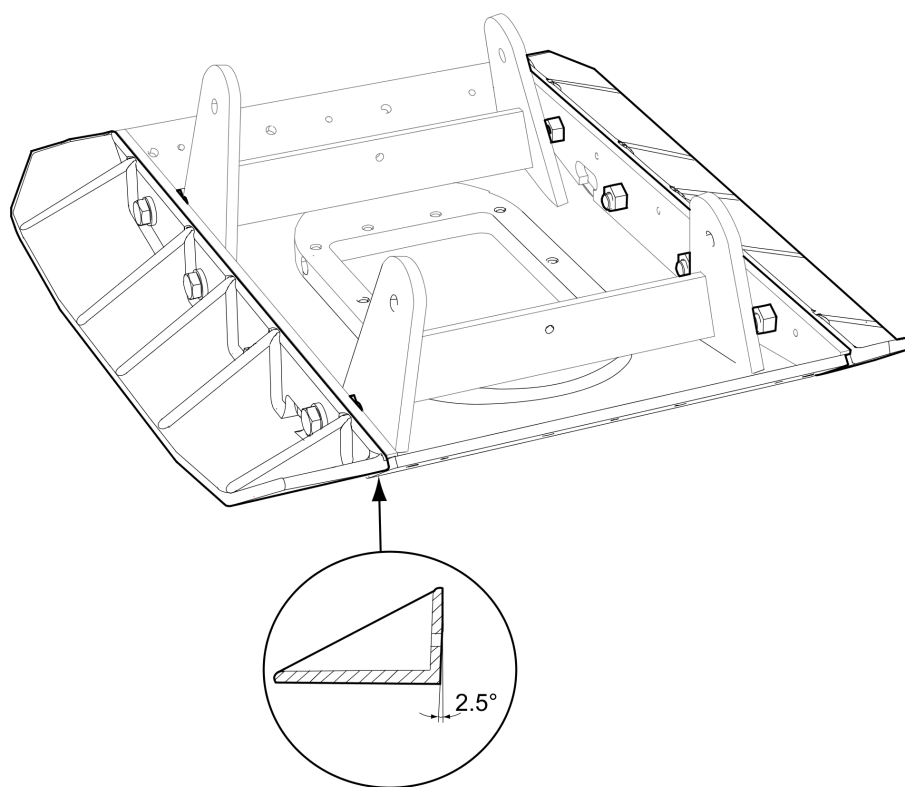


Item	Part No.	Name	Qty	L
1	4700382068	Slanted extension plate kit 2 x 150 mm (2 x 5.90 in.)	1	
2	-	Extension plate, 150 mm, 5.90 in., Slanted 2.5°	2	
3	-	Screw, M20 x 50 mm 8.8 A9K	8	
4	-	Washer, 21 x 45 mm, 0.83 x 0.87 x 1.77 in. 300 HV	8	

Service, repair and wear part kits Hour meter kit

NO EXPLODED VIEW
AVAILABLE
FOR THIS BOM


Item	Part No.	Name	Qty	L
1	4700376948	Hour meter kit	1	
2	4700385600	Hour meter	1	
3	-	Screw, M3 x 10 mm	2	
4	-	Nut, M3	2	

Service, repair and wear part kits **Compaction Indicator Kit**

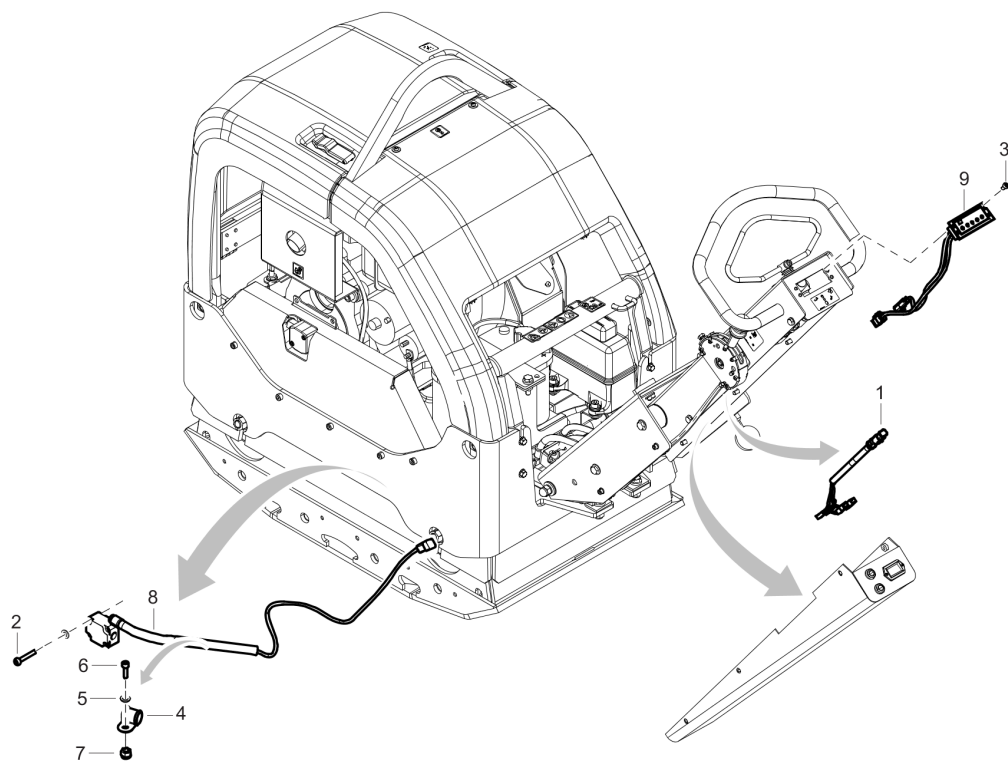


Item	Part No.	Name	Qty	L
-	3382100627	Compaction Indicator Kit	-	
1	3382012189	Wiring Harness	1	
2	0211125003	Screw, M6x30, 8.8	4	
3	4700903658	Screw M5x10	4	
4	4700904346	Pipe clamp covered	3	
5	0301232100	Washer DIN125	5	
6	0211196477	Hex. sock. Screw	3	
7	0291112815	Nut	2	
-	3382014830	Compaction indicator kit	-	
8	-	Measure unit	1	
9	-	Compaction meter	1	

Spare parts list Frame and hoods

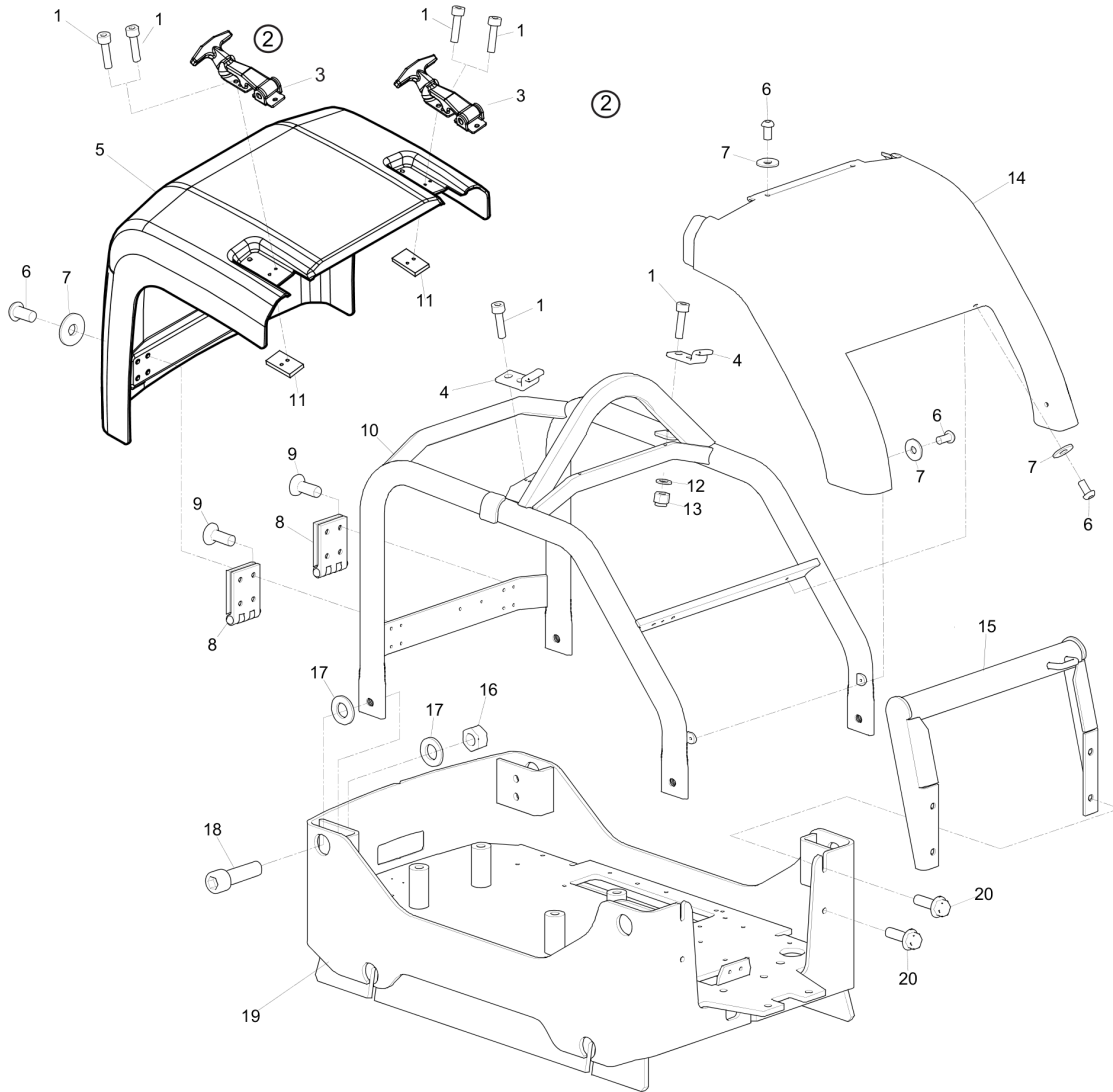


Item	Part No.	Name	Qty	L
1	4700508022	Hexagon socket head cap screw	8	
2	3382015367	Latch	2	
3	-	Hatch	1	
4	-	Lock	1	
5	4700397477	Front hood	1	
6	4700904650	Button head socket screw, M6x12	8	
7	4700904655	Washer, 6 x 18 x 2 mm, 0.24 x 0.71 x 0.08 in. 300 HV	14	
8	4700381882	Hinge	2	
9	4700904649	Screw	8	
10	3382014887	Safety frame	1	
11	3382015298	Lock plate	2	
12	4700904698	Plain washer	4	
13	4700923976	Lock nut	4	
14	3382014898	Rear hood	1	
15	3382014889	Crossbeam	1	
16	0261109210	Nut	4	
17	0301235800	Washer	8	
18	0211196541	Unbrako screw	4	
19	3382014886	Engine plate	1	
20	0147300072	Screw, M8 x 20 mm 8.8 A2K	4	

Spare parts list Ground plate installation

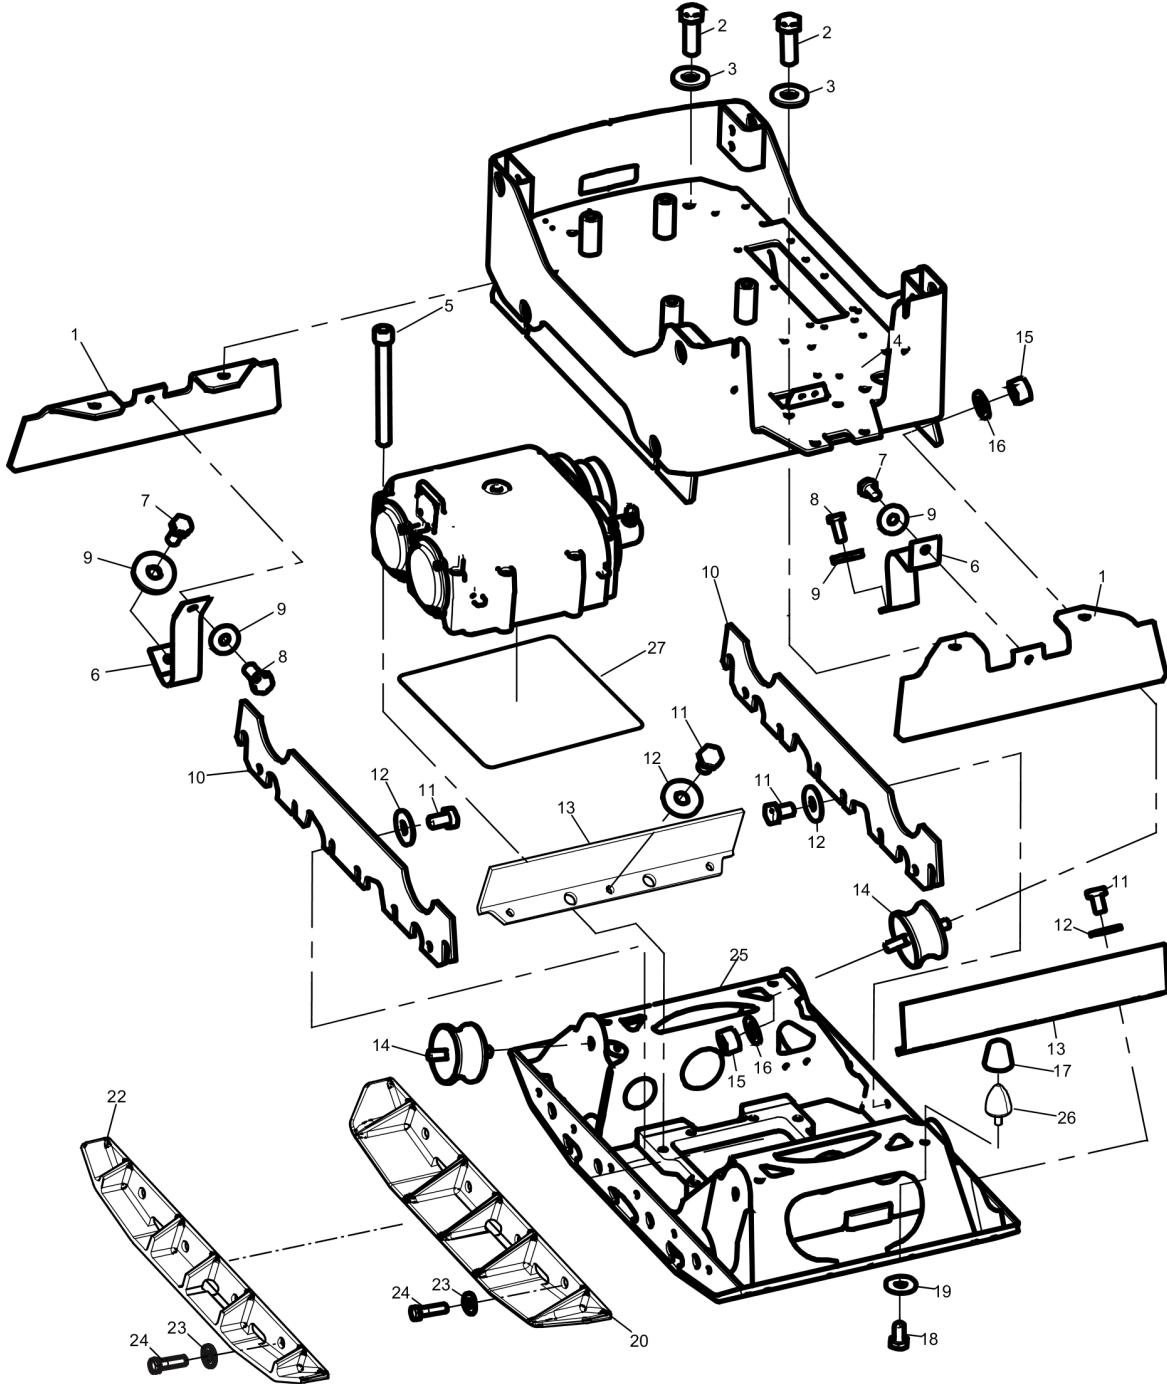

Item	Part No.	Name	Qty	L
1	3382014895	Cover	2	
2	0147140203	Screw	4	
3	4700904213	Steel Plain Washer	4	
4	3382014886	Engine plate	1	
5	0211196492	Hexagon socket head cap screw	10	
6	3382000150	Strap	2	
7	-	Screw M6 x 20 mm 8.8 A2K	2	
8	0147139803	Hex. head screw	2	
9	0303115900	Washer, 13x36x6 mm, 0.51x1.42x0.24 ". 300HV	4	
10	3382012993	Cover	2	
11	0147135903	Hexagon bolt	18	
12	0300027417	Washer	18	
13	3382012854	Cover	2	
14	3382014568	Shock absorber	4	
15	0266211400	Hexagon nut	8	
16	0301237800	Plain washer	8	
17	3382014282	Rubber stop	4	
18	4700900486	Screw	4	
19	4700928441	Washer, 21 x 45 mm	4	
20	3382014937	Extension plate, 150 mm	2	
22	3382014938	Extension plate, 75 mm	2	
23	0147155103	Screw DIN933	8	
24	0333050008	Steel plain washer 21x36x6	8	
25	3382012989	Frame	1	
26	3382011933	Rubber buffer	1	
27	3382015645	O-ring	1	

Spare parts list Engine installation

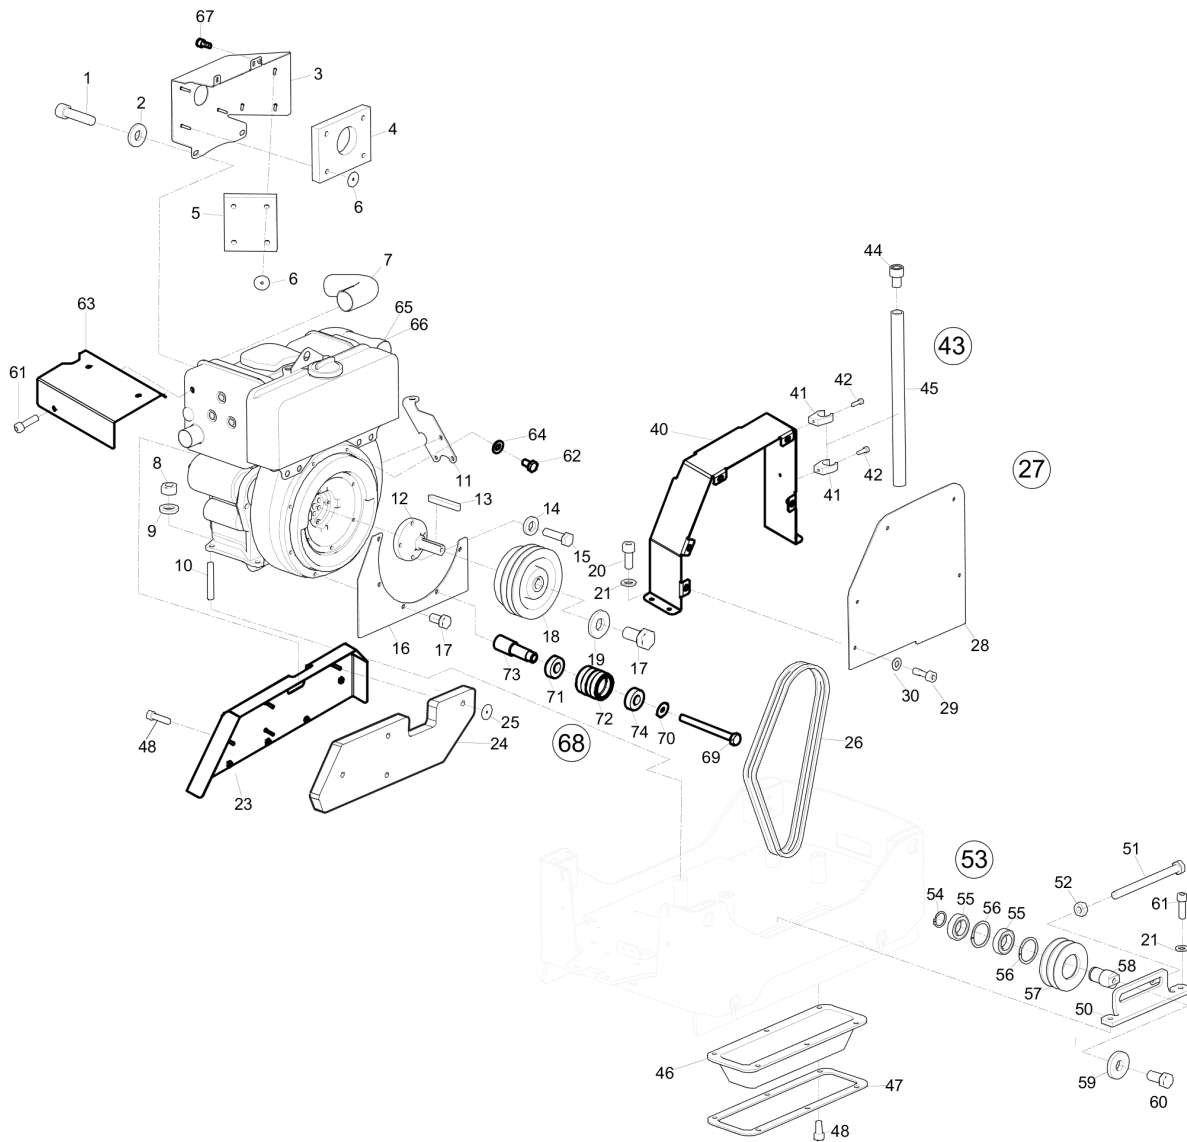


Item	Part No.	Name	Qty	L
1	0211195735	Screw	2	
2	4700904213	Steel Plain Washer	2	
3	3382012838	Heat protection	1	
4	3382012819	Sound insulation	1	
5	3382012817	Sound insulation	1	
6	4700373476	Insulating washer	8	
7	3382012825	Exhaust pipe	1	
8	0266113702	Nut	4	
9	4700904703	Plain washer 13x24x4 mm	4	
10	4700394700	Stud	4	
11	4700281228	Bracket	1	
12	4700281194	Engine shaft	1	
13	4700350036	Key	1	
14	4700904556	Steel plain washer 8,4x16x3,0	4	
15	0147132603	Screw DIN933	4	
16	4700386316	Inner cover	1	
17	0147136003	Hexagon bolt	6	
18	4812070288	Centrifugal clutch, complete	1	
19	4700904213	Steel Plain Washer	1	
20	0211132303	Screw	6	
21	0301233500	Plain washer	8	
23	3382015514	Cover	1	
24	3382014306	Insulation	1	
25	4700373476	Insulating washer	7	
26	3382014951	V-belt	2	
27	3382014900	Cover, complete	1	
28	-	Plate	1	
29	0147300072	Screw, M8 x 20 mm 8.8 A2K	5	
30	0301233500	Plain washer	5	
40	3382014892	V-belt cover	1	
41	4700281116	Clip	2	
42	4700281115	Screw	2	
43	4700281852	Oil drain, complete	1	
44	4700281852	Oil drain, complete	1	
45	3382000150	Strap	1	

Item	Part No.	Name	Qty	L
46	3382011018	Bellow	1	
47	3382011017	Bracket	1	
48	0211132203	Hex. head screw	11	
50	3382013048	Bracket	1	
51	0147195977	Hexagon head screw	1	
52	0266211100	Nut hexagon	1	
53	4700378060	Belt tightener, complete	1	
54	4700150012	Retaining ring for shaft	1	
55	4700111180	Ball bearing	2	
56	4700151019	Retaining ring	2	
57	4700380517	V-belt pulley	1	
58	4700378061	Shaft	1	
59	0303115900	Washer, 13x36x6 mm, 0.51x1.42x0.24 ". 300HV	1	
60	0147140003	Screw DIN933	1	
61	0211132503	Hex sock. screw	2	
62	4700281183	Crank holder	1	
63	4700904649	Screw	2	
64	3382012790	Bracket	1	
65	3382014348	Engine, complete, Hatz 1D81Z electric start,	1	
66	-	Engine, complete	1	
67	0211124403	Screw	1	
68	3382015414	Belt guidance	1	
69	0147137703	Hex. head screw	1	
70	3382015413	Washer	1	
71	3382015470	Bearing	1	
72	3382015412	Belt pulley	1	
73	3382015440	Shaft	1	
74	0502110096	Bearing	1	

This page intentionally left blank

Spare parts list Eccentric element

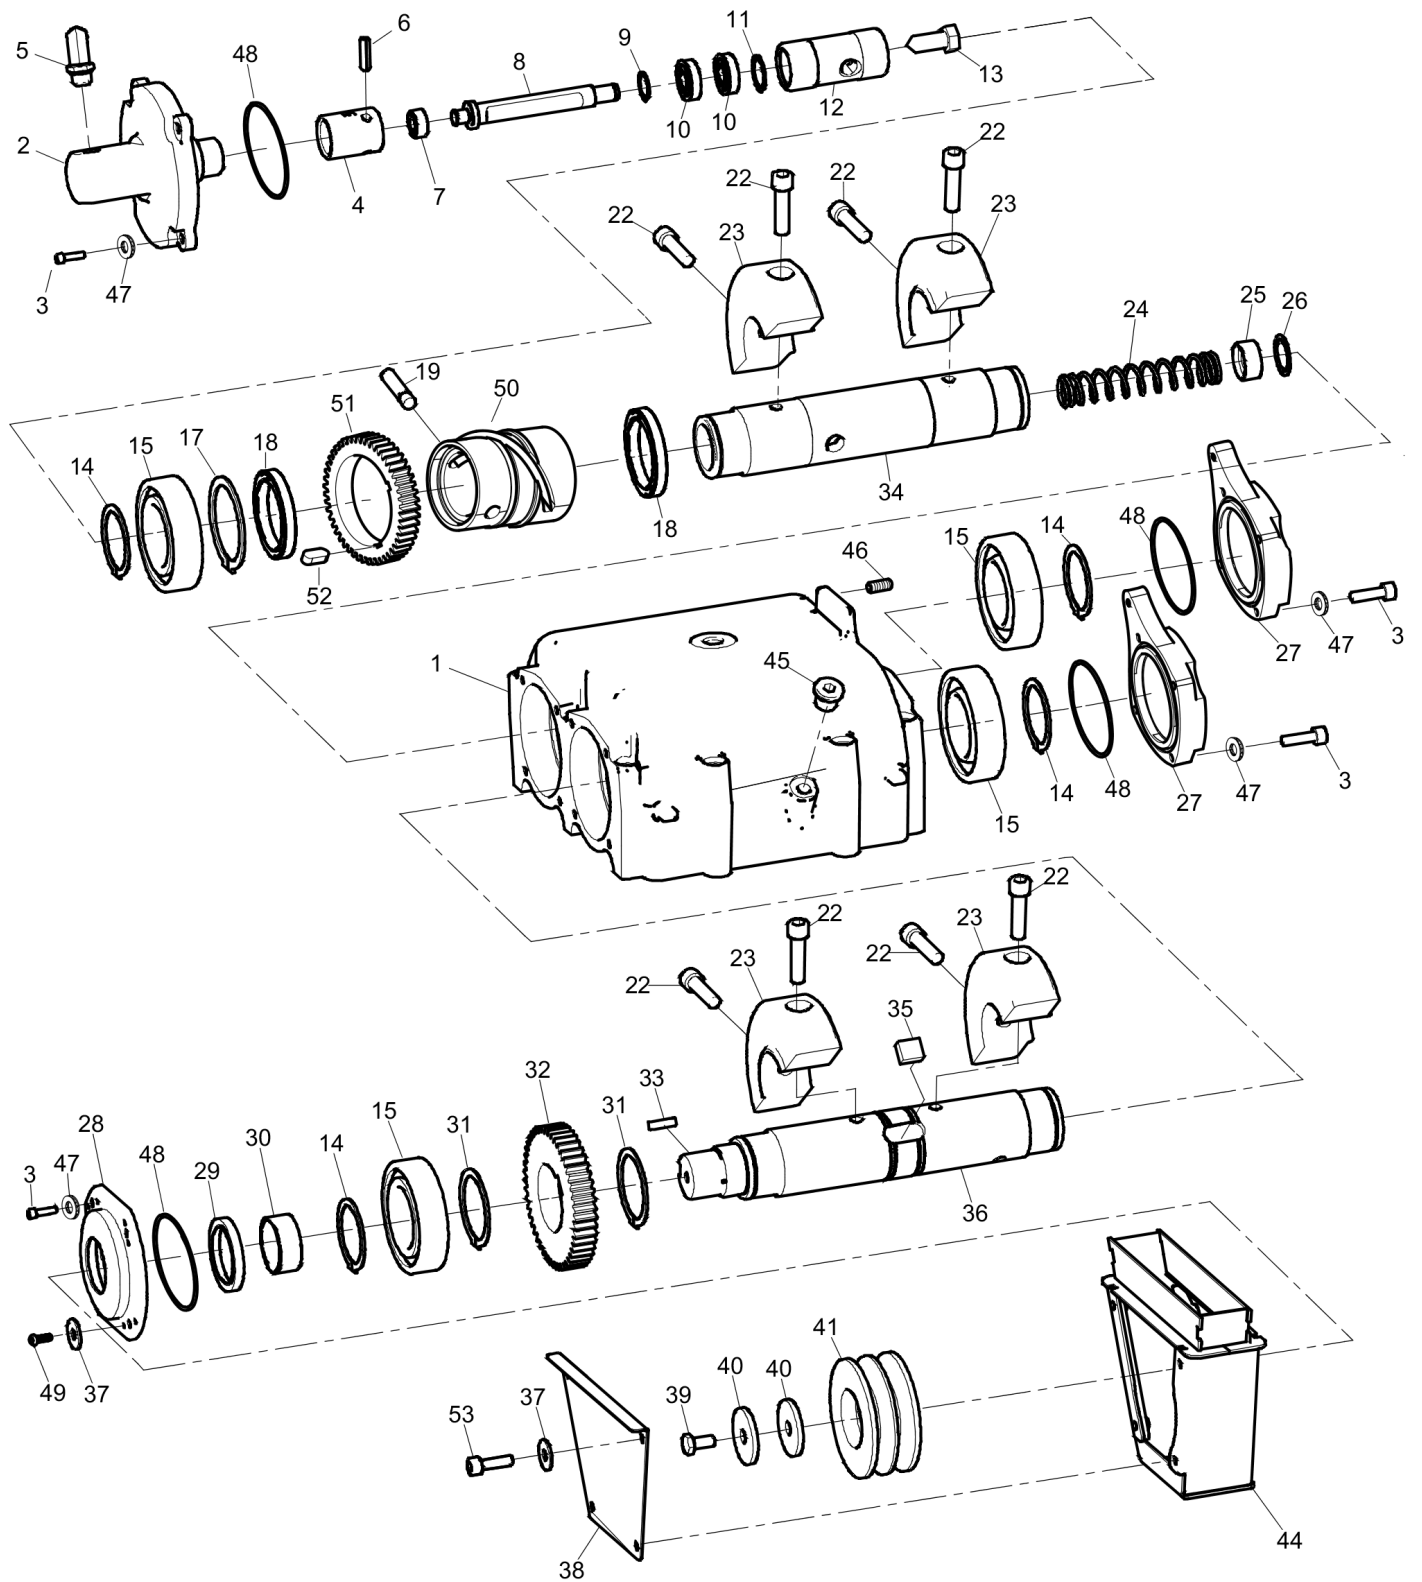


Item	Part No.	Name	Qty	L
1	3382012606	Eccentric housing	1	
2	3382012040	Hydraulic cylinder	1	
3	0211125000	Hex socket screw	16	
4	4812070043	Piston	1	
5	4700792272	Elbow 90 orfs	1	
6	0108132400	Spring pin, Ø6 x 20 mm DIN 1481	1	
7	3382014188	Sealing	1	
8	3382013002	Piston rod	1	
9	4700150003	Retaining ring for shaft	1	
10	3382014140	Ball bearing	2	
11	4700151043	Retaning ring for hole 28	1	
12	3382013003	Piston	1	
13	4700381443	Screw	1	
14	4700150033	Retaining ring	4	
15	3382014138	Bearing	4	
17	4700150035	Snap ring	1	
18	4700928796	Ball bearing	2	
19	3382014460	Pin	1	
22	0211140403	Hex. socket head capscrew	8	
23	3382012625	Eccentric weight	4	
24	3382014139	Spring	1	
25	4700280448	Stop	1	
26	4700928787	Retaining ring	1	
27	3382014463	Cover	2	
28	3382015329	Cover	1	C
29	3382014176	Radial lip-type seal	1	
30	4700928795	Sleeve	1	
31	4700150020	Retaining ring for shaft	2	
32	3382012027	Gear	1	
33	4700350029	Feather key	1	
34	3382012626	Eccentric shaft	1	
35	3382014774	Key	1	
36	3382012043	Eccentric shaft	1	
37	0300027464	Washer	12	
38	3382015331	Belt cover, hatch	1	B

Item	Part No.	Name	Qty	L
39	4700500048	Screw, M10x20 mm 8.8 A3K	1	
40	4700280432	Washer	2	
41	3382015282	V-belt pulley	1	
44	3382015336	Beltcover, sealed	1	A
45	0686644207	Hex. sock. plug	1	
46	0211125003	Screw, M6x30, 8.8	2	
47	0333520018	Lock washer	16	
48	0663210617	O-ring	4	
49	0215001073	Hex. sock. screw various head	8	
50	3382012627	Reverser	1	
51	3382012028	Gear	1	
52	4700928788	Key	1	
53	0211124403	Screw	4	

This page intentionally left blank

Spare parts list Engine

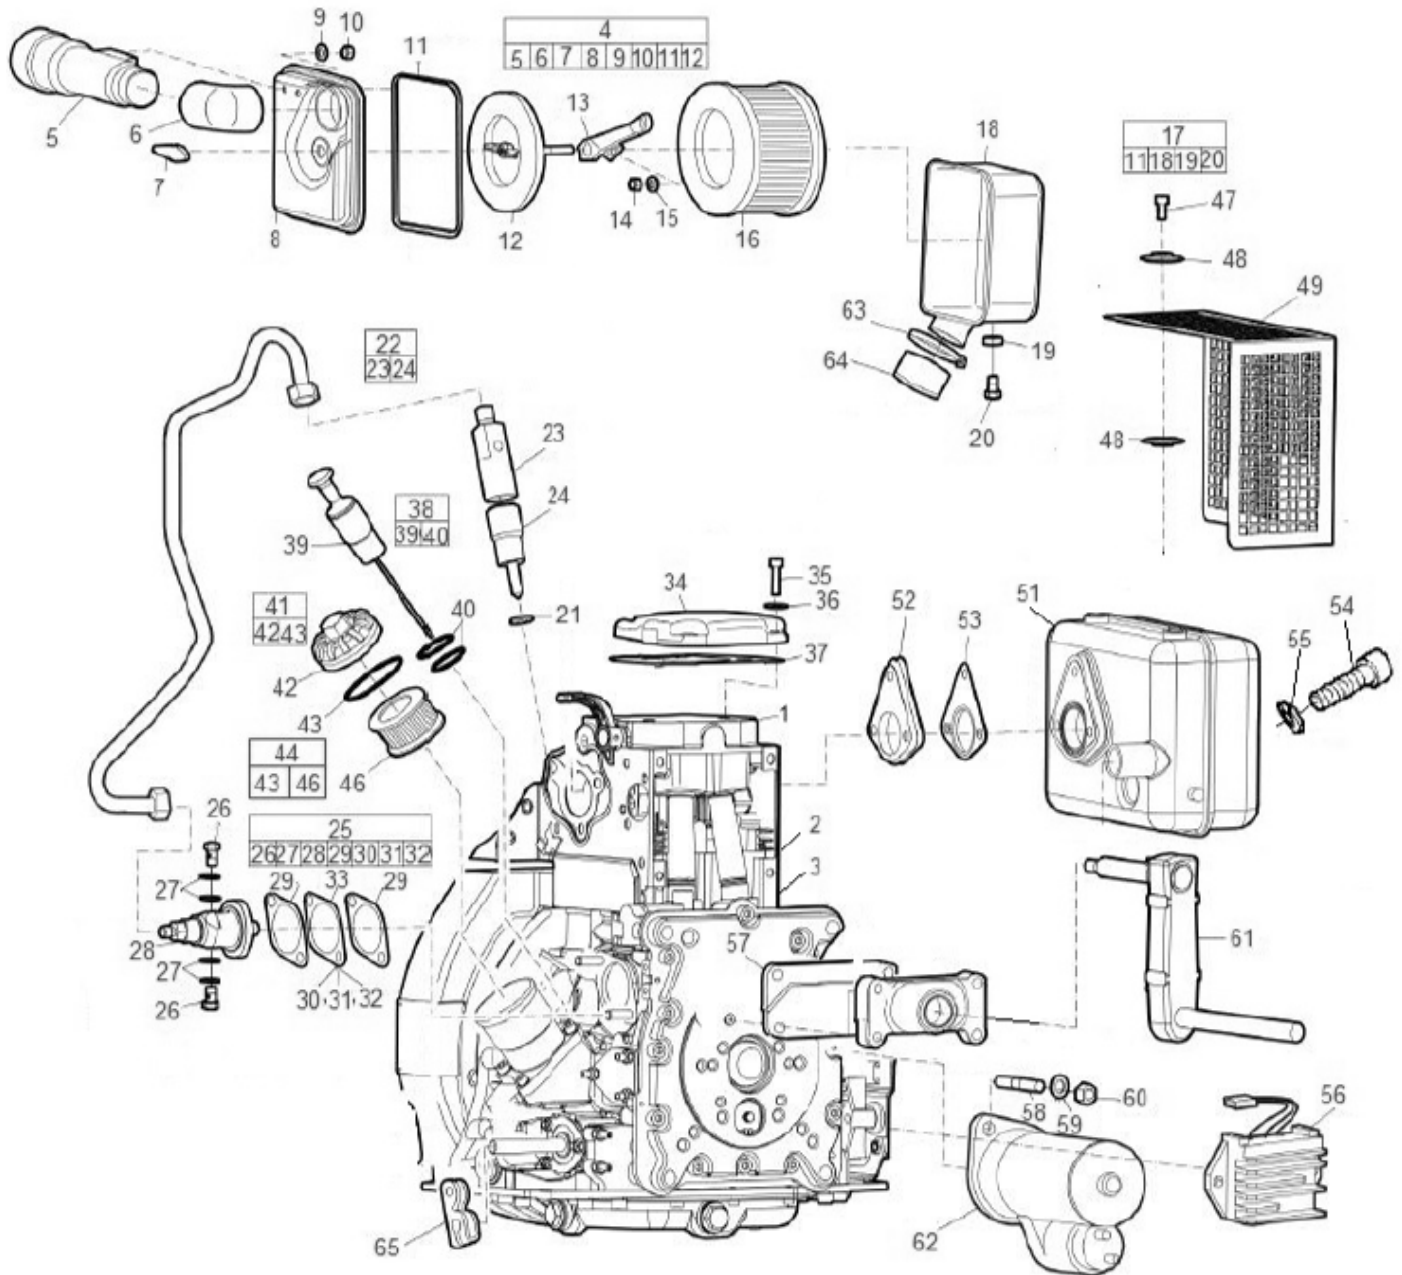


Item	Part No.	Name	Qty	L
1	3382014348	Engine, complete, Hatz 1D81Z electric start,	1	
2	3382015173	Engine, EPA	1	
3	3382014616	Engine, Manual	1	
4	3382100249	Air filter cover complete	1	
5	4700239883	Cyclone	1	
6	4700239882	Elbow	1	
7	4700937017	Nut	1	
8	-	Injector part	1	
9	3382015185	Washer	2	
10	3382015186	Nut	2	
11	4700239526	Gasket	1	
12	3382100235	Holder	1	
12	3382100235	Holder	1	
13	3382015187	Bracket	1	
14	3382015170	Nut, M8	2	
15	3382015169	Washer, M8	2	
16	3382015749	Air Filter	1	
11	4700239526	Gasket	1	
17	4700239516	Housing	1	
11	4700239526	Gasket	1	
18	-	Housing	1	
19	4700239533	Washer	1	
19	4700239533	Washer	1	
20	4700239534	Screw	1	
20	4700239534	Screw	1	
21	3382015256	Gasket	1	
22	3382100237	Injector Complete	1	
23	-	Injector part	1	
23	-	Injector part	1	
24	3382100237	Injector Complete	1	
24	3382100238	Nozzle	1	
25	4700950148	Injector pump, complete	1	
26	3382100241	Banjo screw	2	
26	3382100241	Banjo screw	2	
27	3382100242	Gasket	4	

Item	Part No.	Name	Qty	L
27	3382100242	Gasket	4	
28	-	Pump part	1	
29	4700939616	Shim, 0.10 mm, 0.004 in.	2	
29	4700939616	Shim, 0.10 mm, 0.004 in.	2	
30	4700939778	Shim, 0.6 mm, 0.024 in.	1	
30	4700939778	Shim, 0.6 mm, 0.024 in.	1	
31	4700939777	Shim, 0.9 mm, 0.035 in.	1	
31	4700939777	Shim, 0.9 mm, 0.035 in.	1	
32	4700939776	Shim, 1.2 mm, 0.047 in.	1	
32	4700939776	Shim, 1.2 mm, 0.047 in.	1	
33	4700939779	Shim, 0.3 mm, 0.012 in.	1	
34	4700939606	Valve cover	1	
35	3382015171	Screw, M6 x 25 mm	4	
36	3382015172	Washer	4	
37	4700239333	Valve cover gasket	1	
38	4700239426	Oil dipstick, complete	1	
39	-	Dipstick	1	
40	3382100236	O-ring	2	
40	3382100236	O-ring	2	
41	4700935608	Oil filter cover, cpl	1	
42	-	Injector part	1	
42	-	Injector part	1	
43	4700239335	O-ring	1	
44	3382015160	Gasket	1	
46	-	Fuel filter	1	
43	4700239335	O-ring	1	
46	-	Fuel filter	1	
47	3382015189	Screw M6x12	5	
48	3382015188	Spring Washer	5	
49	4700239428	Muffler cover	1	
51	-	Muffler	1	
50	3382100648	Muffler kit	1	
52	3382100243	Gasket	1	
51	-	Muffler	1	
53	3382100244	Gasket	1	


Item	Part No.	Name	Qty	L
52	3382100243	Gasket	1	
54	-	Screw	1	
53	3382100244	Gasket	1	
55	-	Washer	1	
54	-	Screw	1	
55	-	Washer	1	
56	4700945607	Charging relay	1	
57	4700935753	Gasket	1	
58	3382015190	Stud	2	
59	3382015191	Washer, M12	2	
60	3382015192	Nut, M12	2	
61	-	Safety crank handle	1	
62	4700239501	Starter	1	
63	4700239888	Hose clamp	1	
64	4700239885	Cover	1	
65	4700239508	Throttle lever	1	

Spare parts list Fuel tank Hatz 1D81

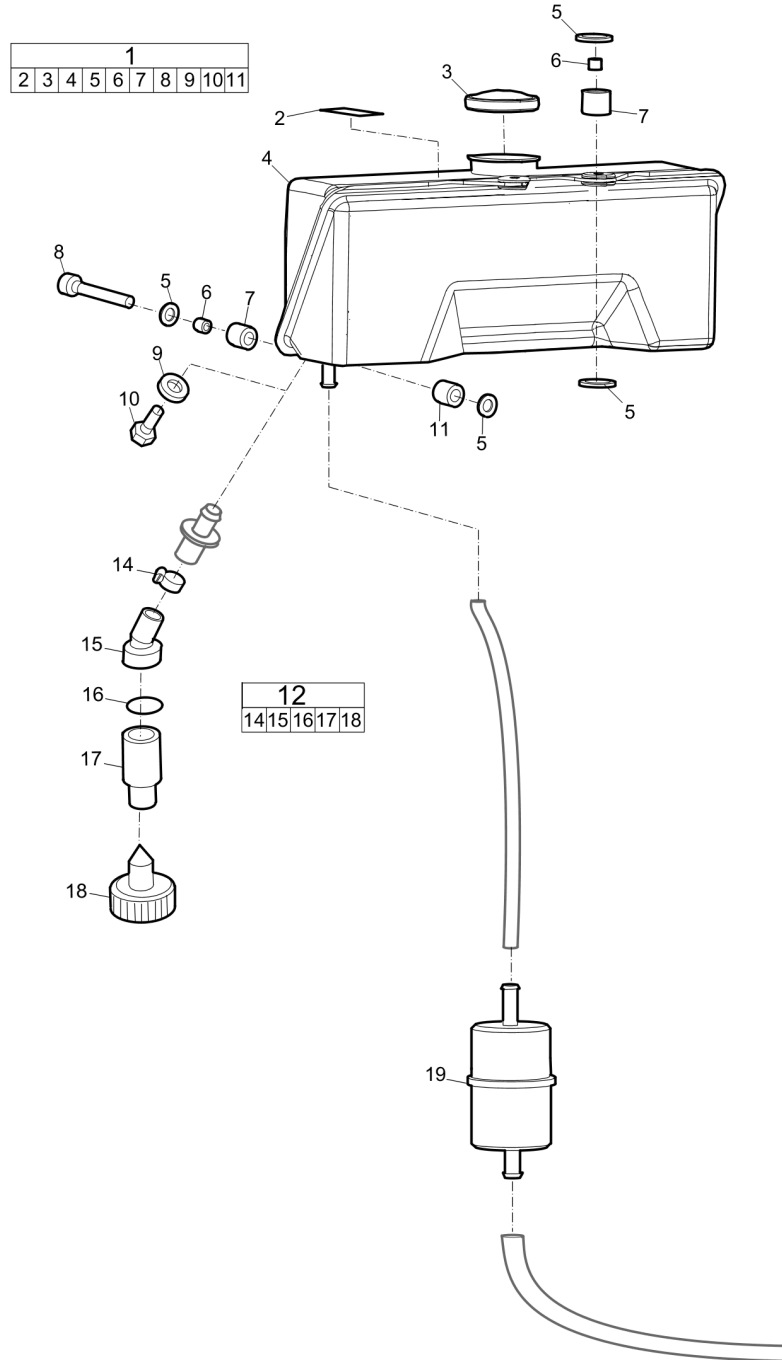


Item	Part No.	Name	Qty	L
1	3382100250	Fuel tank, complete	1	
2	--	Label	1	
3	4700239554	Fuel cap	1	
4	--	Fuel tank	1	
5	4700937422	Washer	12	
6	4700937423	Spacer	6	
7	4700937424	Spacer	6	
8	--	Screw, M8 x 40 mm	4	
9	4700238362	Washer	1	
10	4700937435	Plug	1	
11	4700937436	Sleeve	4	
12	4700938339	Water separator, cpl	1	
14	3382015209	Clamp	1	
15	3382015193	Adapter	1	
16	3382015194	Hose clip	1	
17	3382015195	Water separator	1	
18	3382015196	Drain screw	1	
19	4700937430	Fuel filter	1	

Spare parts list Centrifugal clutch

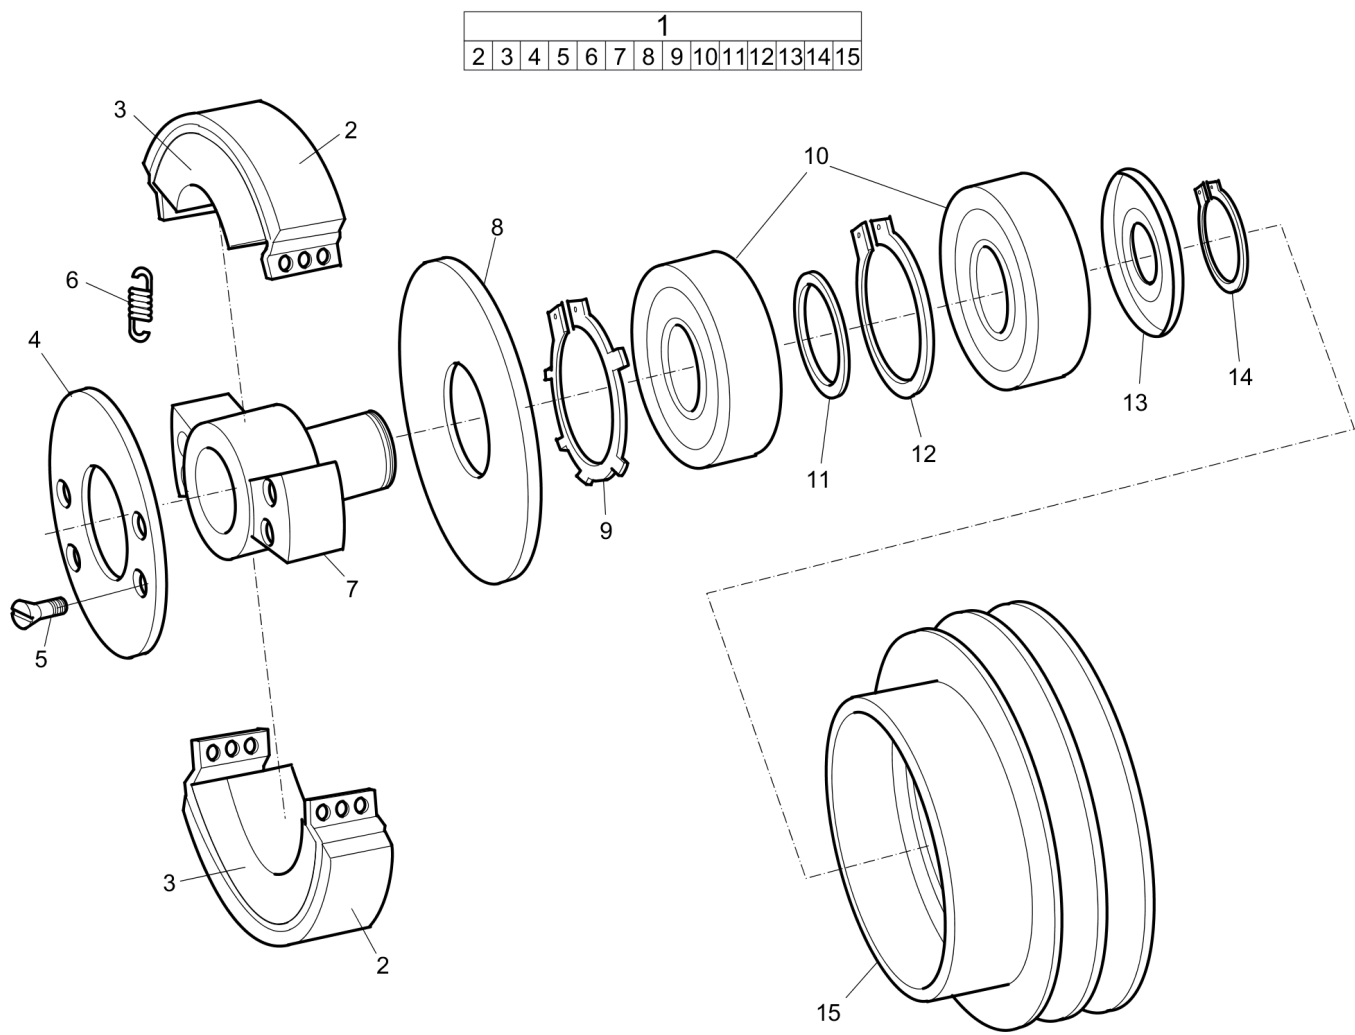

Item	Part No.	Name	Qty	L
1	4812070288	Centrifugal clutch, complete	1	
2	4700939359	Clutch lining	2	
3	4700939358	Weight	2	
4	4700939360	Cover	1	
5	4700939361	Screw	4	
6	4700421246	Spring	4	
7	4700939357	Hub	1	
8	4700939362	Cover	1	
9	4700939363	Lock washer	1	
10	3382100008	Ball bearing	2	
11	4700939356	Washer	1	
12	4700938725	Retaining ring	1	
13	4700938727	Nilos ring	1	
14	4700938726	Snap ring	1	
15	4700939355	V-belt pulley	1	

Spare parts list Hydraulic system

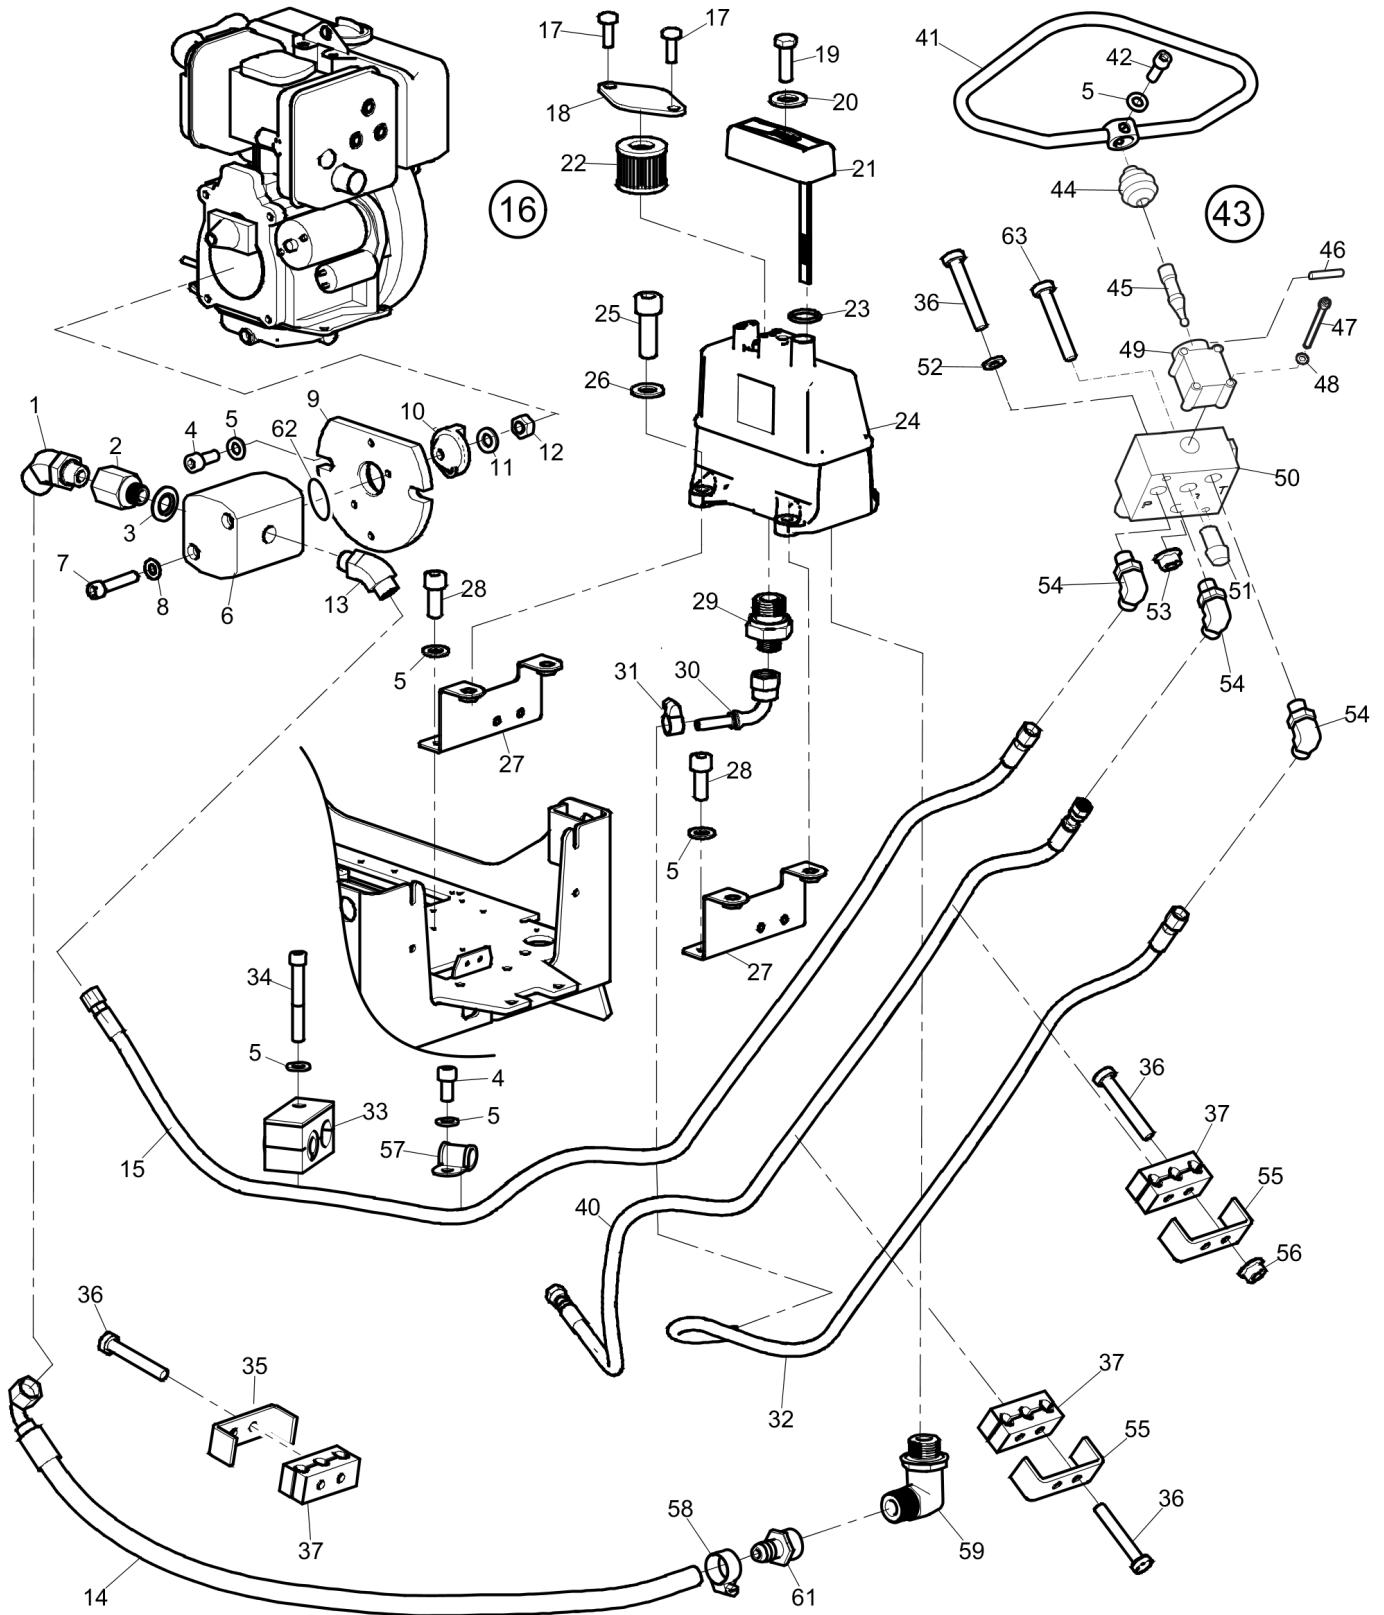


Item	Part No.	Name	Qty	L
1	0570704187	Elbow	1	
2	3390019900	Connection	1	
3	0661100025	Seal washer	1	
4	0211132303	Screw	3	
5	0301233500	Plain washer	9	
6	3382014349	Hydraulic pump	1	
7	0211121803	Hexagon socket head cap screw	2	
8	0301231800	Plain washer	2	
9	3382014239	Adapter	1	
10	3382014238	Coupling	1	
11	0301232100	Washer DIN125	2	
12	0266210800	Nut DIN934	1	
13	4700791415	Elbow 45, O-ring	1	
14	3382014297	Hydraulic hose	1	
15	3382014299	Hydraulic hose	1	
16	4700376677	Hydraulic oil tank, complete	1	
17	4700904960	Screw, K50 x 12 mm Type KX-PT	2	
18	4700381563	Holder	1	
19	4700500021	Screw, M8x25 mm 8.8 A2K	1	
20	4700904229	Washer, 8.4x 6x1.5 mm 300HV	1	
21	4700381385	Cover with oil dipstick	1	
22	4700381566	Air filter	1	
23	4700160110	O-ring	1	
24	-	Oil tank	1	
25	0211136303	Hex sock. screw	4	
26	0300027438	Washer	4	
27	3382012815	Bracket	2	
28	0211132203	Hex. head screw	4	
29	0570702539	Connection	1	
30	0570710005	Hose connection	1	
31	4700313108	Hose clamp	1	
32	3382012895	Hydraulic hose	1	
33	4700383458	Hose holder	1	
34	0211133203	Screw DIN912	1	
35	3382010182	Bracket	1	

Item	Part No.	Name	Qty	L
36	4700500079	Screw M6-1x50 8,8	8	
37	4700280534	Rubber block	3	
40	3382012845	Hydraulic hose	1	
41	4812070025	Control lever	1	
42	0211132503	Hex sock. screw	1	
43	3382014298	Hydraulic valve, complete	1	
44	3382100271	Rubber cover	1	
45	3382100270	Lever	1	
46	3382100269	Pin	1	
47	3382100272	Screw	2	
48	3382100273	Washer	2	
49	3382100268	Housing	1	
50	-	Valve body	1	
51	3382100288	Measuring nipple	1	
52	0333050012	Spherical spring washer	2	
53	0291112816	Lock nut, M8	2	
54	0570704136	Connector	3	
55	3382010182	Bracket	2	
56	0261109981	Nut	2	
57	0346100024	Clamp	1	
58	4700313003	Hose clamp	1	
59	3382014346	Elbow	1	
61	3382014347	Hose coupling	1	
62	4700160328	O-ring	1	
63	0147133003	Hexagon bolt	1	


This page intentionally left blank

Spare parts list Electric equipment

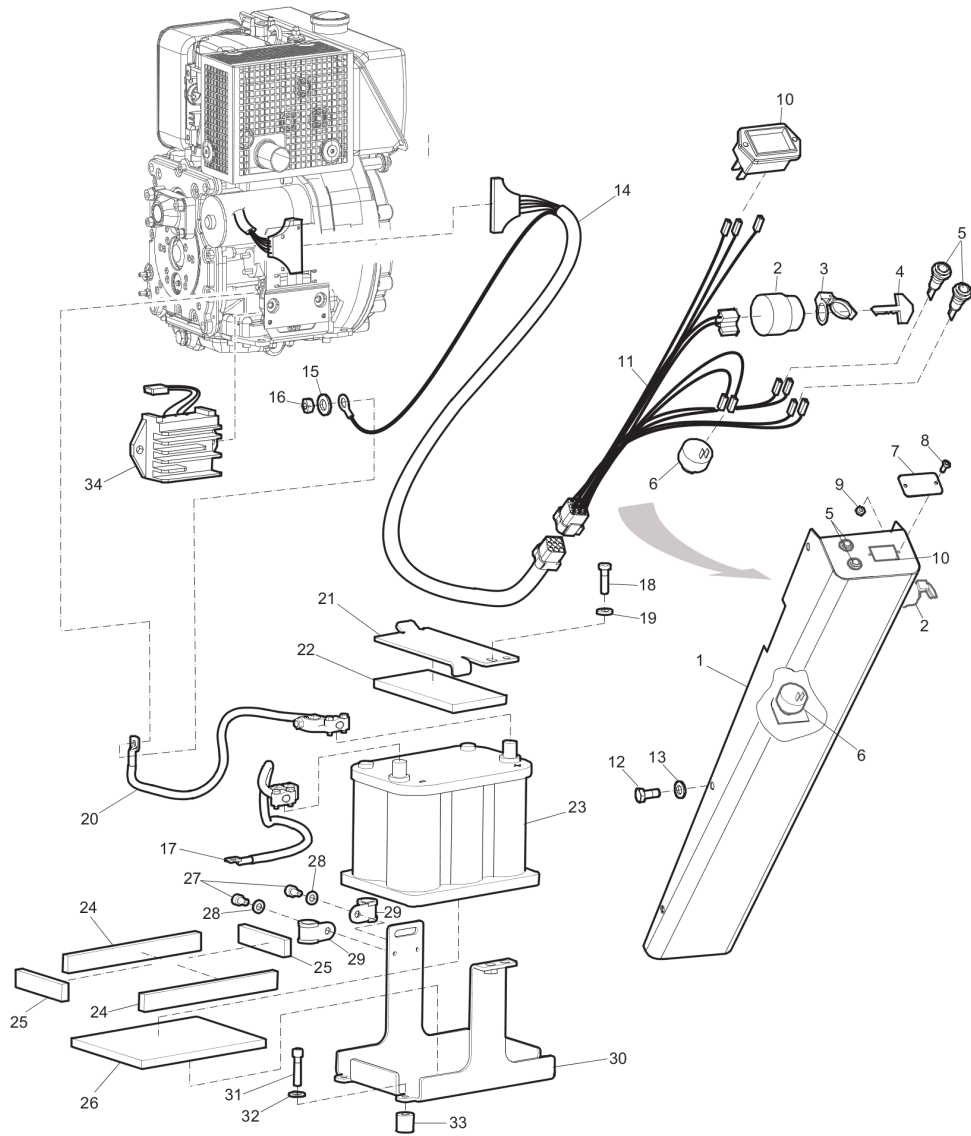


Item	Part No.	Name	Qty	L
1	4700378223	Cover	1	
2	4700238158	Ignition switch	1	
3	4700904428	Cover, ignition	1	
4	4700238236	Ignition key	1	
5	4700791058	Diode lamp	2	
6	4700385599	Buzzer	1	
7	4700376867	Cover	1	
8	4700903658	Screw M5x10	2	
9	4700928927	Lock nut	2	
10	-	Hour meter	1	A
11	4700378225	Cable harness	1	
12	4700500019	Hexagon screw	7	
13	4700904229	Washer, 8.4x 6x1.5 mm 300HV	7	
14	4700282727	Cable harness	1	
15	-	Nut	1	
16	-	Washer	1	
17	3382014678	Battery cable (+)	1	
18	0147136403	Screw	1	
19	0300013022	Washer	1	
20	4700281202	Battery cable (-)	1	
21	3382012765	Holder	1	
22	4700384612	Insulation	1	
23	4700394643	Battery	1	
24	3382014332	Insulation	2	
25	3382014333	Insulation	2	
26	3382012839	Insulation	1	
27	0211124303	Screw M6x10 ISO 4762	2	
28	0301232100	Washer DIN125	2	
29	0346100203	Clamp	2	
30	3382012763	Battery holder	1	
31	0147132203	Hex. head screw	4	
32	0301233500	Plain washer	4	
33	3382014603	Spacer sleeve	4	
34	4700945607	Charging relay	1	

Spare parts list Handle

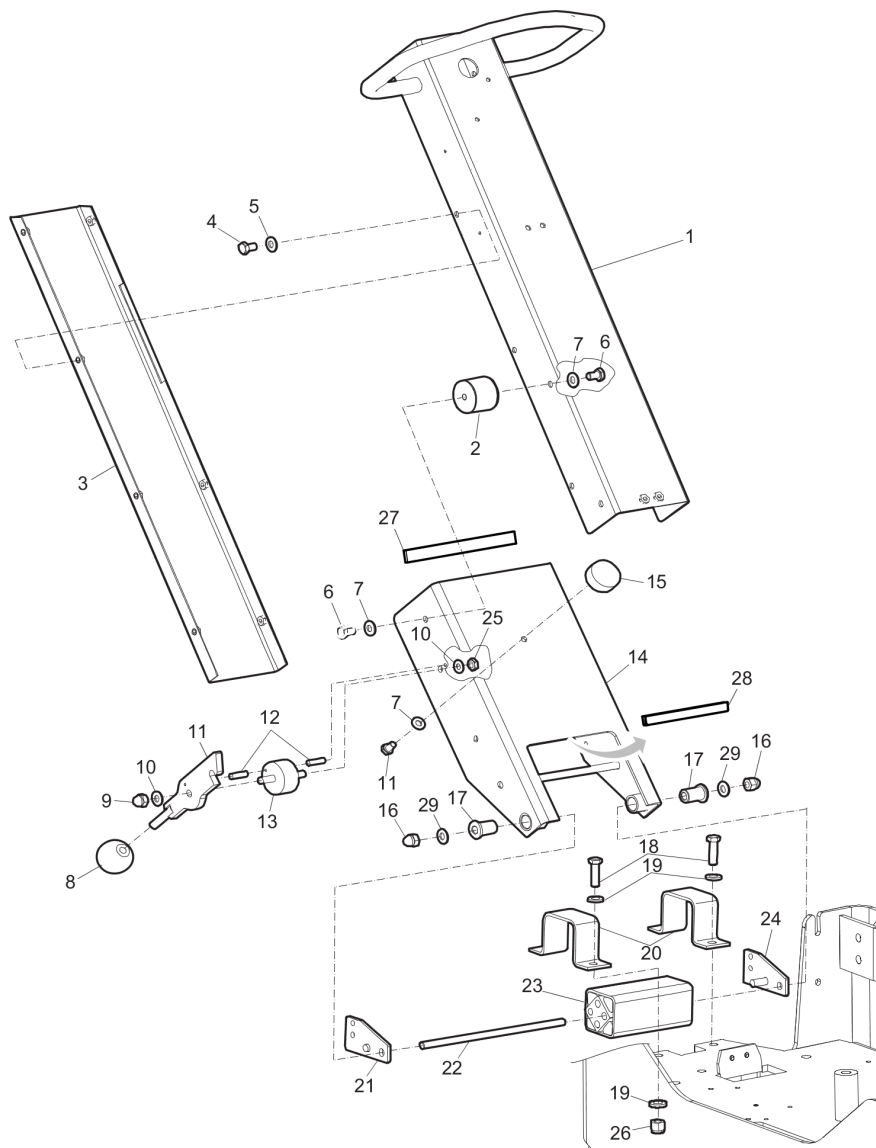


Item	Part No.	Name	Qty	L
1	3382012558	Handle	1	
2	3382010490	Shock absorber	4	
3	4700377312	Cover	1	
4	4700500019	Hexagon screw	8	
5	4700904229	Washer, 8.4x 6x1.5 mm 300HV	8	
6	4700500043	Screw M10x16	9	
7	0300027438	Washer	9	
8	4700281382	Ball knob M12, D= 50mm	1	
9	4700581012	Nut	1	
10	0300027438	Washer	2	
11	4700282724	Hook	1	
12	0108123600	Spirol pin	2	
13	4700281431	Shock absorber	1	
14	3382012557	Handle bracket	1	
15	4700281804	Rubber stop	1	
16	4700581013	Nut, M12	2	
17	3382010495	Bushing	2	
18	0147140303	Hex. head screw	4	
19	4700904703	Plain washer 13x24x4 mm	8	
20	3382010496	Clamp	2	
21	3382010493	Retainer, right	1	
22	3382010491	Stud	1	
23	3382010492	Shock absorber	1	
24	3382010494	Retainer, left	1	
25	4700570006	Hex. nut	1	
26	0291112822	Lock nut	4	
27	4700926911	Rubber strip	1	
28	4700902379	Edge trim	1	
29	3315019508	Lock washer	12	

Spare parts list Throttle control, EPA version

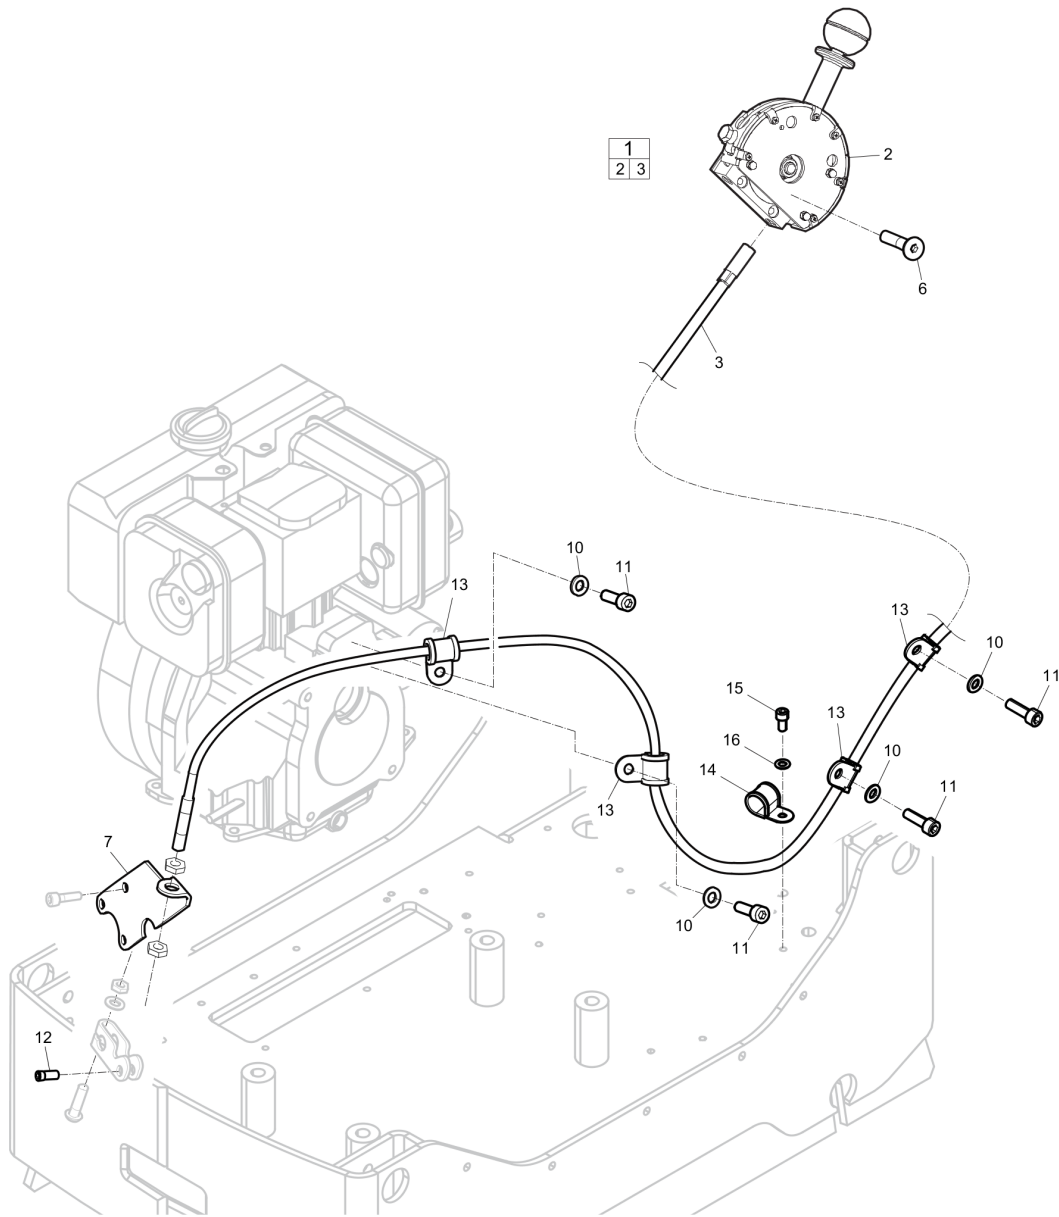


Item	Part No.	Name	Qty	L
1	3382012121	Throttle control	1	A
2	-	Throttle handle	1	
3	3382100297	Cable	1	
6	4700904747	Screw	4	
7	4700281228	Bracket	1	
10	0301232100	Washer DIN125	4	
11	0211124703	Hex sock. screw	4	
12	4700281236	Nipple	1	
13	4700921065	Clamp	4	
14	4700960727	Clamp	1	
15	0211132203	Hex. head screw	1	
16	0301233500	Plain washer	1	

Spare parts list Non EPA throttle control

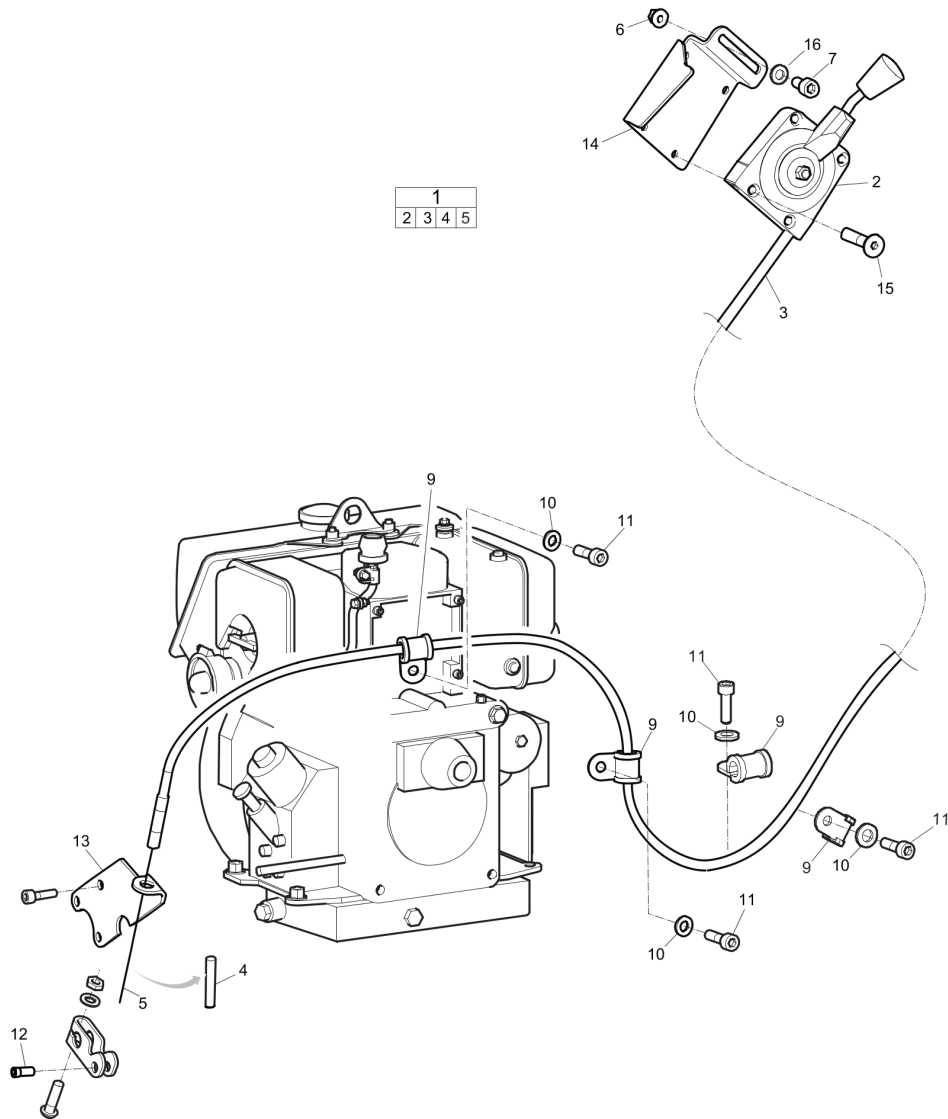

Item	Part No.	Name	Qty	L
1	4700393319	Throttle control	1	A
2	4700397114	Throttle handle	1	
3	4700393319	Throttle control	1	
4	4700393319	Throttle control	1	
5	4700393319	Throttle control	1	
6	4700902285	Nut	1	
7	4700508025	Screw, M6x20 mm 8.8 A2K	1	
9	4700921065	Clamp	5	
10	0301232100	Washer DIN125	5	
11	0211124403	Screw	4	
12	4700281236	Nipple	1	
13	4700281228	Bracket	1	
14	4812070115	Throttle control bracket	1	
15	4700904747	Screw	4	
16	4700904228	Washer 6,4x12x1,5	1	

Spare parts list Labels

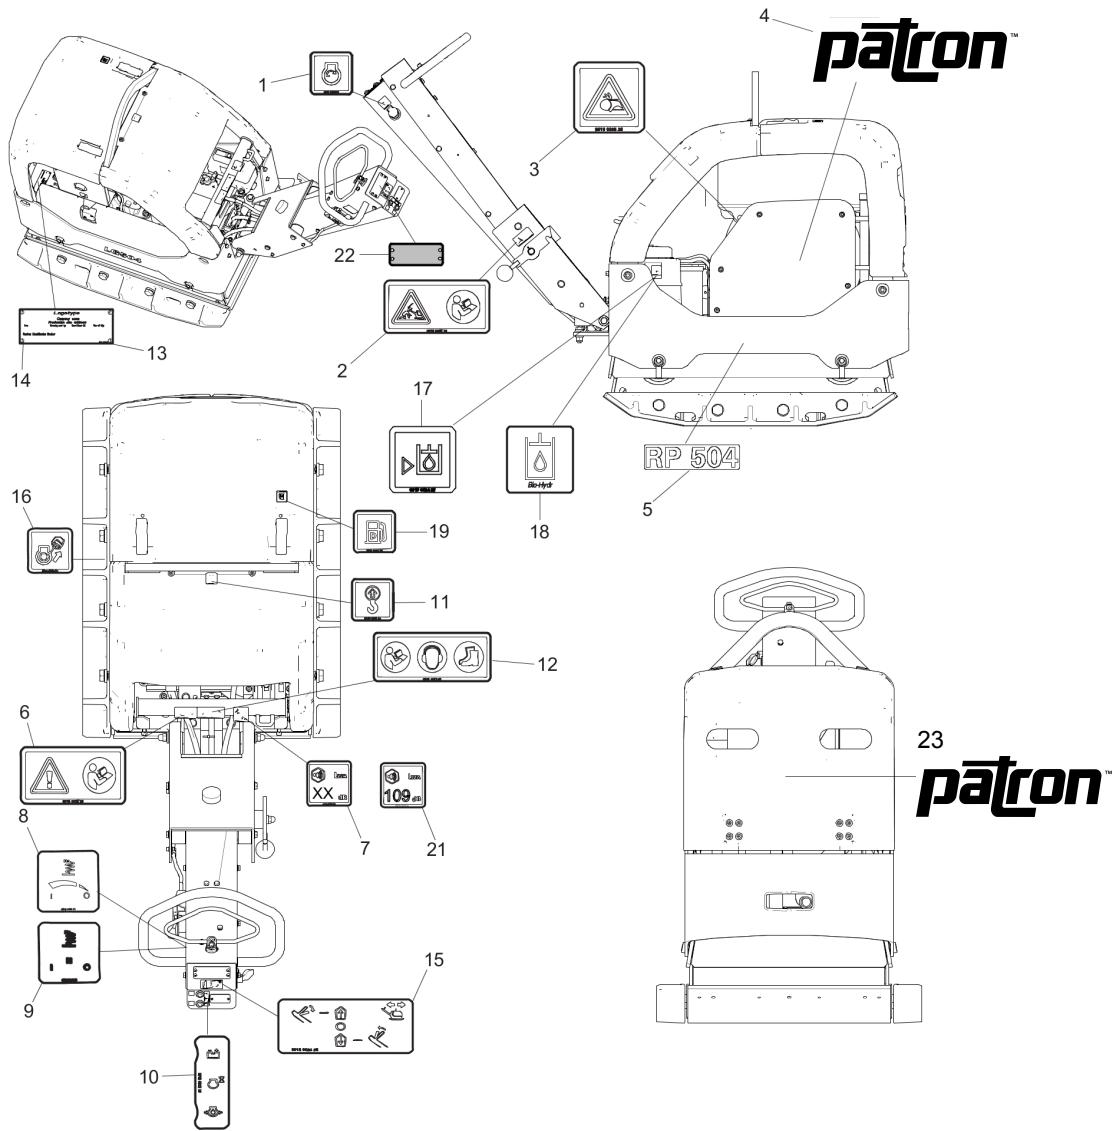

Item	Part No.	Name	Qty	L
1	8915002520	Label, electric engine start	1	
2	8915002523	Safety label, lock handle	1	
3	8915002526	Safety label, rotating V-belts	1	
4	3382012659	Label [} logo		
5	8915300266	Model code RP504	1	
6	8915002529	Decal safety	1	
7	-	Label, noise level	1	
8	8915002521	Label, throttle control non EPA	1	
9	8915002530	Label, throttle control EPA	1	
10	8915002519	Label, charging, hour meter and engine oil pressure	1	
11	8915002528	label, lifting point	1	
12	8915002387	Safety label, read instructions, ear protection and safety boots	1	
13	-	Data plate (Not available separately)	1	
14	-	Screw M6 x 20 mm 8.8 A2K	4	
15	8915002525	Label, operator panel	1	
16	8915002527	Label, manual start	1	
17	8915002427	Label, hydraulic oil level	1	
18	4700904601	Decal biodegradable hydraulic oil	1	
19	8915002626	Label,fuel	1	
21	8915002524	Label sound level	1	
22	3382012413	Cover lid	1	
23	3382012660	Label [} logo		

