





PARTS BREAKDOWN SP-50H / SP-50F

Part Number	Description	Qty
SP30-019-1	Hex. bolt M6*20	2
SP30-019-7	Pan phillips screw M4*8	11
SP30-020-2	Spring washer M8	9
SP30-022	Socket bolt M8*12	5
SP30-022-1	Truss socket bolt M8*12	1
SP30-022-2	O-ring 3.5*7.5	2
SP50-001	Cable gland holder	1
SP50-003	Socket bolt M8*25	4
SP50-005	STOW 14A3C 33ft	1
SP50-006	Cable clamp / Cushion	1
SP50-007	Hex. nut M6	1
SP50-008	Hex. bolt M6*12	1
SP50-009	Carabiner clip 5mm	1
SP50-010	Upper handle	1
SP50-011	Intermerdiate lead wire A	1
SP50-012	Start capacitor 300V250uF	1
SP50-013	Run capacitor 450V30Uf	1
SP50-014	Socket bolt M10*16	4
SP50-015	Socket bolt M8*30	4
SP50-016	Discharge 3" NPT	1
SP50-017	Discharge gasket	1
SP50-019	Centrifugal switch cover	1
SP50-020	Earth lead	1
SP50-021	Centrifugal switch	1
SP50-022	Intermerdiate lead wire B	1
SP50-024	Overload protector	1
SP50-027	Socket bolt M10*30	4
SP50-028	Spring washer M10	4
SP50-029	Motor cover	1
SP50-030	O-ring 3.53*148.82	1
SP50-031	Intermediate gasket A	1
SP50-032	Bearing bracket	1

Part Number	Description	Qty
SP50-033	O-ring 3*155	1
SP50-034	Wave washer 6204	1
SP50-035	Bearing 6204 C3	1
SP50-036	Rotor and shaft	1
SP50-037	Bearing 6305 C3	1
SP50-038	Key 5*5*18	1
SP50-039	Lower handle	1
SP50-040	Motor housing & stator winding	1
SP50-041	Socket bolt M10*25	4
SP50-042	Spring washer M10	4
SP50-046	Socket bolt M8*20	2
SP50-048	Intermediate gasket B	1
SP50-049	Mechanical seal-M20	1
SP50-050	Truss phillips bolt M5*6	3
SP50-051	O-ring 3.1*134.4	1
SP50-052	Pump casing	1
SP50-053	Lip seal 40*25*8	1
SP50-054	Shaft sleeve	1
SP50-055	Adjust washer	1
SP50-056	Impeller-H	1
SP50-057	Impeller-F	1
SP50-058	Hub cover	1
SP50-059	Spring washer M12	1
SP50-060	Cap nut M12	1
SP50-061	O-ring 2*143.5	1
SP50-062	Suction plate-H	1
SP50-063	Suction plate-F	1
SP50-065	Hex. bolt M8*16	3
SP50-066	Strainer	1
SP50-067	Spring washer M10	3
SP50-068	Hex. bolt M10*55	3
	Lubricant V32 430ml	